


Create a zone

Posted on July 28, 2026 by Smaheine

Zones allow you to structure your project drawings to make organization and navigation easier. For example, you can create a zone per building, floor, work phase, or trade.

Available on:  **Archipad Web only**

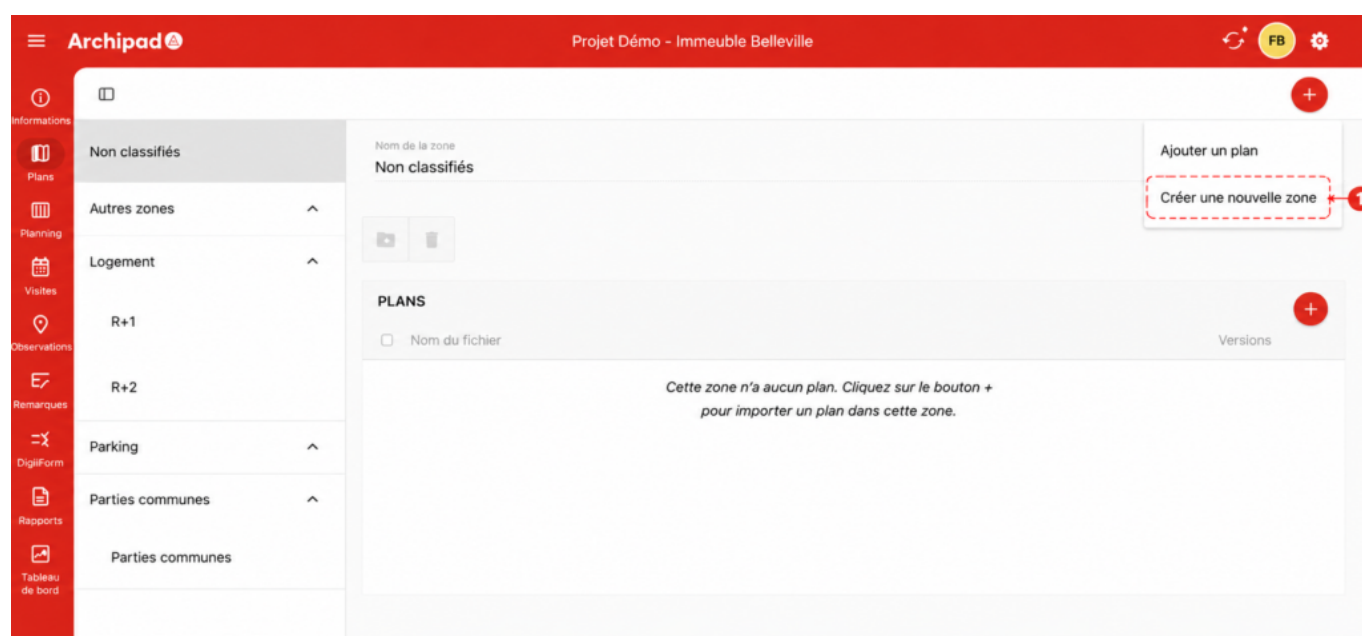

Steps

1. Open the relevant project.
2. Go to the **Drawings** menu.
3. Click the **+** button in the top right corner.
4. Select **Create a new zone**.
5. Enter the zone name.
6. Confirm creation.

To know

Zone creation is not available on Archipad iOS. Once the zone is created from

Archipad Web, it becomes accessible in the iOS application and can be used to organize drawings.